

OTIS AT120 system adjusting manual in English version

START UP

Before switch on the power

Check the connections on the control board :

- Motor and encoder connected on ST306.
- I/O and 24 VDC on P5.
- Power supply from the transformer to the connector ST1.
- Power supply from the transformer into the junction box on the connector.

After mechanically adjusting the car door with the landing doors (gap of locking + coupling dimension), the electrical adjustment can start.

- Put the car on INSPECTION mode in front of one of landing door
- From the top of car, open manually the door and position it in opened position.
- Switch on the power on the operator (wait 30/ 40 seconds for the "clac" in the control box)
- Push the learning and adjustment button at least 3 seconds.

The door is on LEARNING mode and does 1 or 2 opening and closing cycles

- Connect the Service Tool on the SVT connector to open and close the door.